
## **TECHNICAL DATA**




363

3104451205001

## Light duty cylinder, ball - pins

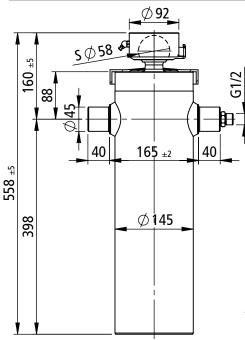

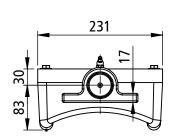

Part Number

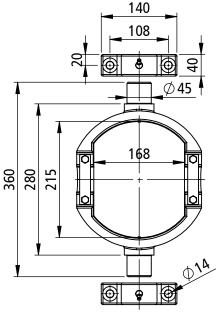


Image: state stat

**Tipping weight** 

9-17 ton

mounting dimension		160 mm + 20 (-5;+30) mm min pull out						out	total stroke			1870 mm	max pressure	200 bar
model: BL445 1870 120 5					code: 3104451205001				weight: 5			3 kg	HS Penta	
extension	1	2	3	4	5	-	-	-	-			number of	stages: 5	
diameter [mm]	120	105	90	75	60									
stroke [mm]	376	381	368	371	374							total: 1870	mm	
thrust [kN] at pmax	226	173	127	88	57							average working thrust: 90 kN		
oil [dm³]	4.3	3.3	2.3	1.6	1.1							total: 12.6 c	lm <sup>3</sup>	

## **TECHNICAL NOTES AND SPECIFICATIONS**

User responsibility. Incorrect selection or incorrect use of the here described component and its related items may cause death, personal injury and property damage. All the information here reported are intended for further investigations by users with technical knowledge. The user, as manufacturer of the completed machinery which will incorporate the here described components, is the solely responsible for the final selection of the components. The user must carry out necessary research and tests on components to determine whether, by its design and construction of the completed machinery activity activity activity of the selection of the sel

construction, all performance, endurance, maintenance, safety and warning requirements are met. The user must assure the compliance of the completed machinery with all appropriate laws, directives, norms, industry standards. The normal application of telescopic cylinder is to lift up tipping bodies, loaded with different

materials, and consequently discharge this material whilst the cylinder is extended all along its stroke.

The cylinder has been designed to provide only a linear pushing force. The cylinder is not a structural member and must not be used as a stabilizer or be subject to side or pulling load. The cylinder will not prevent the dump body or trailer from rollover or lateral tilt. The body weight plus the max payload are the max tipping weight that can be raised by the

Ine body weight plus the max payload are the max tipping weight that can be raised by the cylinder. This value, calculated at the max pressure, is a rough indication of the tipping power of the cylinder and must be used as a first criteria for the selection of the cylinder. The real tipping mass can only be calculated by the design engineer of the completed machinery, and must take into account the geometry of the dump body, operating conditions and all reasonably foreseeable uses.

## REMARKS

[2010.12.13] [2010.12.13]

Old code: BL084505 (Codice vecchio: BL084505)

Refer to www.hspenta.it for mounting instructions, bracket details, hydraulic oil specification, user & maintenance, service, general precautions, general guarantee conditions. Never exceed the herein specified limits of the cylinder. Cylinder rated pressure reflect only the capability of the pressure-containing envelope and not

Cylinder rated pressure reflect only the capability of the pressure-containing envelope and not the force transmitting capability of mounting configurations. The ordinary use of telescopic cylinder will not require any coating since the telescopic stages are

The ordinary use of telescopic cylinder will not require any coating since the telescopic stages are exposed to atmospheric agents only during the tip-up operation, if duration is below 2 hours. Surface coatings can be supplied on request. H.S.PENTA warranty does not apply to any kind of corrosion of coated or non-coated parts. When closed, leave the tipping control in descent position. The exposed surface of first moving

When closed, leave the tipping control in descent position. The exposed surface of first movin stage may get rusty, but it will not affect the functionality of the cylinder. Maximum extension speed less than 0.5 m/s.

Hydraulic oil temperature admitted between -40°C and +100°C.

In case the cylinders must be stored, do not remove the package. Store them in a dry place, not exposed to rain. Do not store the cylinders for more than 6 months. User shall pay attention to stroke length, loading and cylinder mounting in order to avoid bending or buckling of the cylinder at any position.

REVISIONS	
2011.06.30 - Aggiornamento dati guide FSP	01
2016.03.31 - Aggiornamento dati	02
2016.03.31 - Aggiornamento dati Emesso: 2013.09.26	0