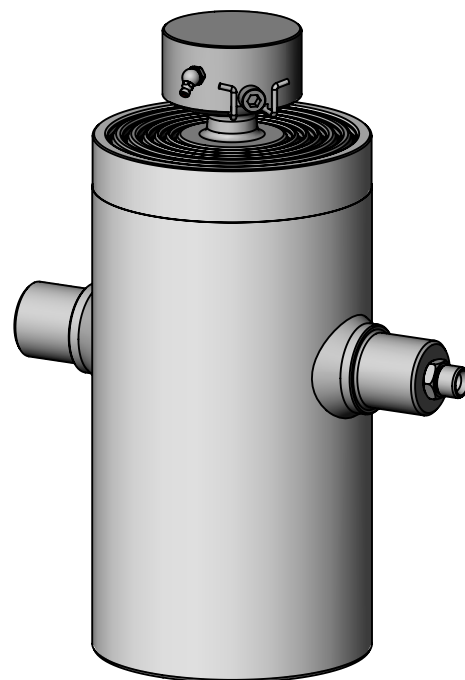
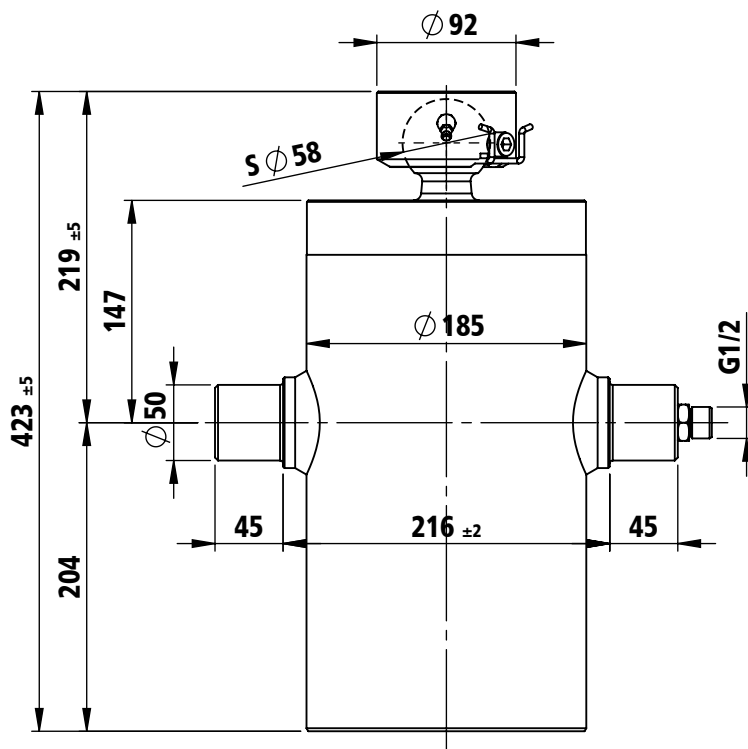



Light duty, ball - pins

Part Number

3103001606001

Tipping weight

15-25 ton


mounting dimension						219 mm + 20 mm min pull out				total stroke			1386 mm	max pressure		180 bar
model: BL300 1386 160 6						code: 3103001606001				weight: 61 kg			HS Penta			
extension	1	2	3	4	5	6	-	-	-	--	--	number of stages: 6				
diameter [mm]	160	140	120	105	90	75	--	--	--	--	--					
stroke [mm]	231	238	235	235	222	225	--	--	--	--	--	total: 1386 mm				
thrust [kN]	362	277	204	156	115	80	--	--	--	--	--	max thrust admitted: 146 kN				
oil [dm³]	4.6	3.7	2.7	2.0	1.4	1.0	--	--	--	--	--	total: 15.4 dm³				

TECHNICAL NOTES AND SPECIFICATIONS

- The normal application of telescopic cylinder is to lift up tipping bodies, loaded with different materials, and consequently discharge this material whilst the cylinder is extended all along its stroke.
- The body weight plus the max payload are the max tipping weight that can be raised by the cylinder. This value, calculated at the max pressure, is a rough indication of the tipping power of the cylinder and must be used as a first criteria for the selection of the cylinder. The real tipping mass can only be calculated by the design engineer of the dump truck, and must take into account the geometry of the dump body and operating conditions. Never exceed the maximum thrust.
- Never exceed maximum pressure.
- The cylinder has been designed for loads along the longitudinal axis: the cylinder is a lifting device only and may not be used as structural member or be subject to side load.
- The ordinary use of telescopic cylinder does not require any coating as the telescopic stages are exposed to atmospheric agents only during the tip-up operation. Therefore telescopic cylinders will be supplied without any coating in absence of any specific requirements.
- H.S.PENTA warranty does not apply to any kind of corrosion of coated or non-coated parts. See terms of warranty.
- Maximum extension speed less than 0.2 m/s.
- Hydraulic oil temperature admitted between -40°C and +100°C.
- In case the cylinders must be stored, do not remove the package. Store them in a dry place, not exposed to rain. Do not store the cylinders for more than 6 (six) months. Further specifications see mounting instructions, hydraulic oil specification sheet, user & maintenance manual.

REMARKS

[2011.06.27] [2011.06.27]

REVISIONS

01

02

03

04